

MASCHINEN

DE Bedienungsanleitung

Mobile Tischkreissäge

ΕN

**User Manual** 

Mobile table saw



TS 255 M

# Mobile Tischkreissäge/ Mobile table saw

Bedienungsanleitung und Sicherheitshinweise lesen und beachten!

Read the operation manual carefully before first use!



Technische Änderungen sowie Druck- und Satzfehler vorbehalten!

Technical data subject to changes, errors excepted!


Ausgabe/Edition: 2012 - Revision 01 - DE/EN

HOLZMANN-MASCHINEN GmbH Marktplatz 4 | 4170 Haslach | AUSTRIA Gewerbepark 8 | 4707 Schlüsslberg | AUSTRIA Tel: +43 - 7289 / 71562-0 | Fax: +43 - 7289 / 71562-4 Tel: +43 - 7248 / 61116-0 | Fax: +43 - 7248 / 61116-6 info@holzmann-maschinen.at , www.holzmann-maschinen.at



# 1 INHALT / INDEX

1	INHALT / INDEX					
2						
3	VORWORT					
4						
4	l.1	TECHNISCHE DATEN	6			
5	SICH	HERHEIT				
5	5.1	Bestimmungsgemäße Verwendung	-			
5	5.2	Arbeitsbedingungen				
	5.3	Unzulässige Verwendung				
_	5.4	GENERELLE SICHERHEITSHINWEISE				
_	5.5	Zusätzliche Sicherheitshinweise zur TS 255 M				
5	5.6	Restrisiken	10			
6	INB	ETRIEBNAHME	11			
6	5.1	Sicherheitseinrichtungen				
	6.1.					
	6.1.	, , ,				
	6.1.					
	6.1.					
	5.2	ELEKTRISCHER ANSCHLUSS				
	5.3	AUSPACKEN DER MASCHINE				
	5.4	MONTAGE DER KNEBELSCHRAUBE				
	5.5	Aufbau der Tischverlängerung				
	5.6					
7		DIENUNG				
7	7.1	EINSTELLFUNKTIONEN				
	7.1.					
	7.1.	5 5				
_	7.1.	5				
	7.2	SÄGEBLATTWECHSEL				
	7.3	ÜBERPRÜFUNG DES ANSCHLAGS				
	7.4 7.5	TRANSPORT DER KREISSÄGE				
	_					
8		RTUNG				
9		FACE				
10	Т	ECHNICS	20			
1	10.1	TECHNICAL DATA	20			
11	S	AFETY GUIDELINES	21			
	1.1	Proper usage	21			
	1.2	INCORRECT USAGE				
	1.3	SAFETY INSTRUCTIONS				
	1.4	SAFETY DEVICES FOR THE MOBILE TABLE SAW TK 255M				
	1.5	REMAINING RISKS				
1	11.6	ELECTRICAL CONNECTION				
	11.6	3				
12	Α	SSEMBLY				
1	12.1	RECOMMENDED ACCESSORIES	27			

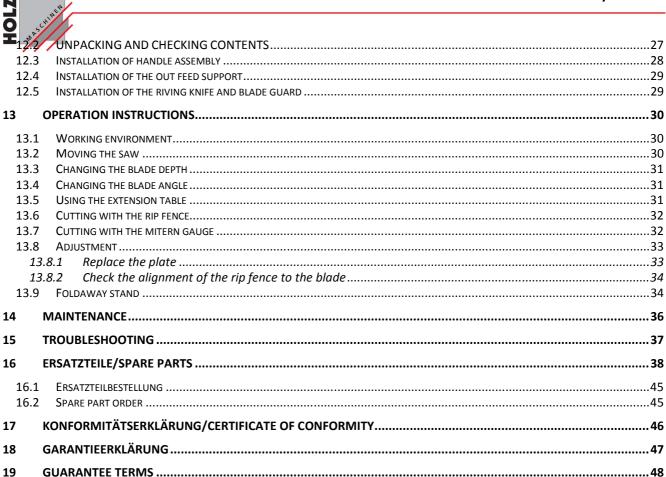



# 2 SICHERHEITSZEICHEN / SAFETY SIGNS







- **DE** WARNUNG! Beachten Sie die Sicherheitssymbole! Die Nichtbeachtung der Vorschriften und Hinweise zum Einsatz des Erdbohrers kann zu schweren Personenschäden und tödliche Gefahren mit sich bringen.
- **EN ATTENTION!** Ignoring the safety signs and warnings applied on the machine as well as ignoring the security and operating instructions can cause serious injuries and even lead to death.



- **DE ANLEITUNG LESEN!** Lesen Sie die Betriebs- und Wartungsanleitung Ihrer Maschine aufmerksam durch und machen Sie sich mit den Bedienelementen der Maschine gut vertraut um die Maschine ordnungsgemäß zu bedienen und so Schäden an Mensch und Maschine vorzubeugen.
- **EN READ THE MANUAL!** Read the user and maintenance manual carefully and get familiar with the controls n order to use the machine correctly and to avoid injuries and machine defects.



- **DE SCHUTZAUSRÜSTUNG!** Das Tragen von Gehörschutz, Schutzbrille sowie Sicherheitsschuhen ist Pflicht.
- **EN PROTECTIVE CLOTHING!** The operator is obligated to wear proper ear protection, safety goggles and safety shoes



- **DE CE-KONFORM** Dieses Produkt entspricht den EG-Richtlinien.
  - **EC-CONFORM** This product complies with the EC-directives.



#### 3 VORWORT

# Sehr geehrter Kunde!

Diese Bedienungsanleitung enthält Informationen und wichtige Hinweise zur Inbetriebnahme und Handhabung der mobilen Tischkreissäge TS255M.

Die Bedienungsanleitung ist Bestandteil der Maschine und darf nicht entfernt werden. Bewahren Sie sie für spätere Zwecke auf und legen Sie diese Anleitung der Maschine bei, wenn sie an Dritte weitergegeben wird!

#### Bitte beachten Sie die Sicherheitshinweise!

Lesen Sie vor Inbetriebnahme diese Anleitung aufmerksam durch. Der sachgemäße Umgang wird Ihnen dadurch erleichtert, Missverständnissen und etwaigen Schäden wird vorgebeugt.

Halten Sie sich an die Warn- und Sicherheitshinweise. Missachtung kann zu ernsten Verletzungen führen.



Durch die ständige Weiterentwicklung unserer Produkte können Abbildungen und Inhalte abweichen. Sollten Sie Fehler feststellen, informieren Sie uns bitte per E-Mail oder mit dem Produktinformationsformular.

Technische Änderungen und Irrtümer vorbehalten!

#### Urheberrecht

© 2011

Diese Dokumentation ist urheberrechtlich geschützt. Die dadurch verfassungsmäßigen Rechte bleiben vorbehalten! Insbesondere der Nachdruck, die Übersetzung und die Entnahme von Fotos und Abbildungen werden gerichtlich verfolgt – Gerichtsstand ist Rohrbach!

#### Kundendienstadressen

#### **HOLZMANN MASCHINEN GmbH**

A-4170 Haslach, Marktplatz 4 Tel 0043 7289 71562 - 0 Fax 0043 7289 71562 - 4 info@holzmann-maschinen.at

MO-FR 8-12 & 13-17h GMT+1



# 4 TECHNIK

# 4.1 Technische Daten

Spezifikation	Parameter
Anschluss	230 V/ 50 Hz
Nennaufnahmeleistung	1,8 kW
Leerlaufdrehzahl	4500 min -1
Sageblatt-Durchmesser x Bohrungsdurchmesser	255 x 30 mm, HM 36 Z
Spaltkeildicke	2,05 mm
max. Schnitttiefe 90°	82 mm
max. Schnitttiefe 45°	58 mm
Gewicht	38 kg
Arbeitstisch	640x580 mm
Motor	1800W
Tischgröße	580x640 mm
Sägeblattgeschwindigkeit	4500 RPM



#### 5 SICHERHEIT

# 5.1 Bestimmungsgemäße Verwendung

Die Maschine nur in technisch einwandfreiem Zustand sowie bestimmungsgemäß, sicherheits- und gefahrenbewusst benutzen! Störungen, welche die Sicherheit beeinträchtigen können, umgehend beseitigen lassen!

Es ist generell untersagt, sicherheitstechnische Ausrüstungen der Maschine zu ändern oder unwirksam zu machen!

# 5.2 Arbeitsbedingungen

Die Maschine ist für die Arbeit unter folgenden Bedingungen bestimmt:

Relative Luftfeuchtigkeit

Bei 40°C max. 50%

Bei 20°C max. 90%

\_\_\_\_

Betriebstemperatur von +5°C bis +40°C

max. Höhe über dem Meeresspiegel 1000m min. Beleuchtung 500 Lux

Die Maschine ist nicht für den Betrieb im Freien bestimmt.

Die Maschine ist nicht für den Betrieb in einer Umgebung bestimmt, die elektromagnetisch belastet ist ("Elektrosmog").

Die Maschine ist nicht für den Betrieb in einer Arbeitsumgebung mit Gasen, Dämpfen u.a. bestimmt, welche die Isolierung der elektronischen Komponenten angreifen, korrodieren oder zerstören könnten.

Die Maschine ist nicht für den Betrieb unter explosionsgefährlichen Bedingungen bestimmt.

Die Maschine ist nicht für den Betrieb in einer Arbeitsumgebung bestimmt, in der regelmäßig Vibrationen auftreten, da diese die Leistungsfähigkeit, Arbeitsgenauigkeit und Lebensdauer der Maschine vermindern.

Die Bearbeitung von entzündbaren und explosiven Materialien ist verboten (z.B. reines Aluminium, Magnesium etc.).

#### 5.3 Unzulässige Verwendung

- Der Betrieb der Maschine unter Bedingungen außerhalb der in dieser Anleitung angegebenen Grenzen ist nicht zulässig.
- Der Betrieb der Maschine ohne die vorgesehenen Schutzvorrichtungen ist unzulässig;
- die Demontage oder das Ausschalten der Schutzvorrichtungen ist untersagt.
- Etwaige Änderungen in der Konstruktion der Maschine sind verboten.
- Eine Überlastung der Maschine ist nicht zulässig.
- Der Betrieb der Maschine ohne Kühlflüssigkeit ist verboten.
- Der Betrieb der Maschine mit unzureichender Ölung/Schmierung ist verboten.
- Der Betrieb der Maschine auf eine Art und Weise bzw. zu Zwecken, die den Anweisungen dieser Bedienungsanleitung nicht zu 100% entspricht, ist untersagt.



Für eine andere oder darüber hinausgehende Benutzung und daraus resultierende Sachschäden oder Verletzungen übernimmt HOLZMANN-MASCHINEN keine Verantwortung oder Garantieleistung.

#### 5.4 Generelle Sicherheitshinweise

Warnschilder und/oder Aufkleber an der Maschine, die unleserlich sind oder entfernt wurden, sind umgehend zu erneuern!

Zur Vermeidung von Fehlfunktionen, Schäden und gesundheitlichen Beeinträchtigungen sind folgende Hinweise UNBEDINGT zu beachten:



Arbeitsbereich und Boden rund um die Maschine sauber und frei von Öl, Fett, Kühlflüssigkeit und Materialresten halten!

Für eine ausreichende Beleuchtung im Arbeitsbereich der Maschine sorgen!

Die Maschine nicht im Freien verwenden!

Bei Müdigkeit, Unkonzentriertheit bzw. unter Einfluss von Medikamenten, Alkohol oder Drogen ist das Arbeiten an der Maschine verboten!



Das Klettern auf die Maschine ist verboten! Schwere Verletzungen durch Herunterfallen oder Kippen der Maschine sind möglich!



Die Maschine darf nur vom eingeschulten Fachpersonal bedient

Unbefugte, insbesondere Kinder, und nicht eingeschulte Personen sind von der laufenden Maschine fern zu halten!





Wenn Sie an der Maschine arbeiten, tragen Sie keinen lockeren Schmuck, weite Kleidung, Krawatten oder langes, offenes Haar. Lose Objekte können sich in rotierenden und bewegenden Objekten verfangen und zu schweren Verletzungen führen!







Vor Wartungsarbeiten oder Einstellarbeiten ist die Maschine von der Spannungsversorgung zu trennen! Vor dem Trennen der Spannungsversorgung den Hauptschalter ausschalten (OFF).

Verwenden Sie das Netzkabel nie zum Transport oder zur Manipulation der Maschine!



Am Gerät befinden sich nur wenige von Ihnen zu wartenden Komponenten. Es ist nicht notwendig, die Maschine zu demontieren. Reparaturen nur durch den Fachmann durchführen lassen!

Zubehör: Verwenden Sie nur von HOLZMANN empfohlenes Zubehör! Wenden Sie sich bei Fragen und Problemen an unsere Kundenbetreuung.

### 5.5 Zusätzliche Sicherheitshinweise zur TS 255 M

- Der Betrieb ist nur mit Fehlerstrom-Schutzschalter (RCD max. Fehlerstrom 30mA) zulassig.
- Tragen Sie Gehorschutz. Die Einwirkung von Larm kann Gehörverlust bewirken.
- Beim Hantieren mit Sageblattern und rauen Werkstoffen Handschuhe tragen.
- Beim Arbeiten entstehender Staub ist oft gesundheitsschadlich und sollte nicht in den Korper gelangen. Staubabsaugung verwenden und zusatzlich geeignete Staubschutzmaske tragen. Abgelagerten Staub grundlich entfernen, z.B. Aufsaugen.
- Vor jedem Gebrauch Gerat , Anschlusskabel, Verlangerungskabel und Stecker auf Beschadigung und Alterung kontrollieren. Beschadigte Teile nur von einem Fachmann reparieren lassen.
- Fehler in der Maschine, einschlieslich der Schutzeinrichtung oder der Sageblatter, sind, so bald sie entdeckt werden, der fur die Sicherheit verantwortlichen Person zu melden. Schutzeinrichtung der Maschine unbedingt verwenden.
- Benutzen Sie zum sicheren Arbeiten Einrichtungen wie z.B. Schutz- und Druckvorrichtung, Anschlagplatte, Zufuhrschieber etc.!
- Kreissägen dürfen nicht zum Schlitzen (im Werkstuck beendete Nut) verwendet werden.
- Falzen oder Nuten ist nur mit einer geeigneten Schutzvorrichtung, z. B. einer Tunnelschutzvorrichtung über dem Sagetisch, erlaubt.
- Stutzen Sie große Platten ab, um das Risiko eines Rückschlags durch ein klemmendes Sägeblatt zu vermindern. Große Platten konnen sich unter ihrem Eigengewicht durchbiegen. Platten mussen auf beiden Seiten, sowohl in Nahe des Sagespalts als auch am Rand, abgestutzt werden.
- Spane oder Splitter durfen bei laufender Maschine nicht entfernt werden.
- Abgenutzte Tischeinlage ersetzen.
- Keine Sageblatter benutzen die beschadigt oder verformt sind.
- Der Grundkorper des Sageblattes darf nicht dicker und die Schrankung nicht kleiner als die Dicke des Spaltkeils sein. Spaltkeil nicht entfernen.
- Ein fur den zu schneidenden Werkstoff geeignetes Sageblatt auswahlen.
- Sageblatter, die nicht den Kenndaten in dieser Gebrauchsanweisung entsprechen, durfen nicht verwendet werden.
- Es durfen nur Werkzeuge verwendet werden, die EN 847-1 entsprechen.
- Keine aus Schnellarbeitsstahl gefertigten Sageblatter verwenden.
- Die auf dem Sageblatt angegebene Hochstdrehzahl ist einzuhalten.
- Die Werkzeuge mussen in einem geeigneten Behältnis transportiert und aufbewahrt werden.
- Die Tischkreissage nur mit eingerasteter Transportsicherung am Handgriff transportieren.
- Die obere Schutzhaube darf nicht als Griff zum Transportieren benutzt werden!
- Während des Transports der Maschine muss die obere Schutzhaube den oberen Teil des Sageblattes abdecken.
- Um die Gerauschentwicklung zu minimieren muss das Werkzeug gescharft sein und alle Elemente zur Lärmminderung (Abdeckungen usw.) ordnungsgemäß eingestellt sein.



#### 5.6 Restrisiken

Auch bei Einhaltung aller Sicherheitsbestimmungen und bei bestimmungsgemäßer Verwendung sind folgende Restrisiken zu beachten:

- Verletzungsgefahr für die Hände/Finger durch den rotierenden Bohrkopf während dem Betrieb.
- Haare und lose Kleidung etc. können vom rotierenden Bohrkopf erfasst und aufgewickelt werden! Schwere Verletzungsgefahr! Sicherheitsbestimmungen bzgl. Arbeitskleidung unbedingt beachten.
- Verletzungsgefahr durch Kontakt mit spannungsführenden Bauteilen.
- Verletzungsgefahr durch Kippen der Maschine
- Schnittgefahr durch nicht entgratete Bohrkanten
- Verletzungsgefahr für das Auge durch herumfliegende Teile, auch mit Schutzbrille.
- Gefahr durch Freisetzen von chemischen Partikeln im zu bearbeitenden Material, die krebserregend oder sonst für die Gesundheit schädlich sind.

Diese Risiken können reduziert werden, wenn alle Sicherheitsbestimmungen angewendet werden, die Maschine ordentlich gewartet und gepflegt wird und die Maschine bestimmungsgemäß und von entsprechend geschultem Fachpersonal bedient wird. Trotz aller Sicherheitsvorrichtungen ist und bleibt ihr gesunder Hausverstand und Ihre entsprechende technische Eignung/Ausbildung zur Bedienung einer Maschine wie der TS 255M der wichtigste Sicherheitsfaktor.



#### **6 INBETRIEBNAHME**


## 6.1 Sicherheitseinrichtungen

#### 6.1.1 Kreissägeblattschutz (a)

Der Kreissägeblattschutz verhindert einerseits unbeabsichtigten Kontakt von Gegenständen bzw. Personen mit dem Sägeblatt und andererseits zum Absaugen von Holzspänen während der Bearbeitung.


#### 6.1.2 Spaltkeil (b)

Der Spaltkeil ist so dimensioniert, dass er in seiner Breite dicker als das Sägeblatt ist. Dies verhindert, dass die Zähne am hinteren Umfang des Sägeblattes das Werkstück nicht berühren und es ungewollt beschädigt, bzw. herausgeschleudert werden kann.

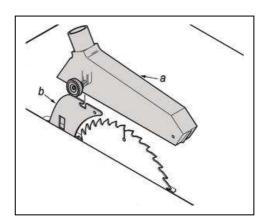


#### 6.1.3 Schiebestock (P)

Der Schiebestock dient als "Verlängerung" des Armes und ist stets zu verwenden um Verletzungen vorzubeugen. Der Schiebstock kann in einem dafür vorgesehenen Schlitz an der Maschine verstaut werden

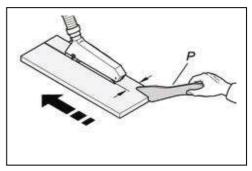

#### 6.1.4 EIN-AUS-Taster mit NOT AUS Funktion

Der Schalter im Bild nebenan dient als EIN/AUS Schalter und ist auch mit einer NOT AUS Funktion ausgestattet. Der grüne Schalter (a) ist der EIN- und der rote (b) der AUS-Schalter. Die Maschine kann ebenfalls zum Stillstand gebracht werden, indem auf dem großen roten Knopf außerhalb (NOT AUS Schalter) gedrückt wird.

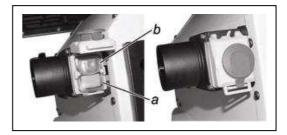

Symbolfoto



#### 6.2 Elektrischer Anschluss



# **A** ACHTUNG

Bei Arbeiten an einer nicht geerdeten Maschine: Schwere Verletzungen durch Stromschlag im Falle einer Fehlfunktion möglich!

Daher gilt:

Maschine muss geerdet sein und an einer geerdeten Steckdose betrieben werden

Der elektrische Anschluss der Maschine ist für den Betrieb an einer geerdeten Steckdose vorbereitet!

Der Stecker darf nur mit einer fachgerecht montierten und geerdeten Steckdose verbunden werden!

Der mitgelieferte Stecker darf nicht verändert werden. Sollte der Stecker nicht passen oder defekt sein, darf nur ein qualifizierter Elektrotechniker diesen Stecker modifizieren bzw. erneuern!

Im Falle einer Reparatur oder eines Austausches darf der Erdungsleiter nicht an eine unter Spannung stehende Dose angeschlossen werden!


Überprüfen Sie mit einem qualifizierten Elektriker oder Servicetechniker, dass die Erdungsanweisungen verstanden wurden und die Maschine geerdet ist!

Ein beschädigtes Kabel ist umgehend zu erneuern!

# 6.3 Auspacken der Maschine

Packen Sie die Maschine vorsichtig aus und kontrollieren Sie den Inhalt anhand der nachfolgend dargestellten Skizze.


- 1. Hauptmodul
- 2. Tischverlängerung
- 3. Gehrungslineal
- 4. Sägeblattschutz
- 5. Parallelanschlag
- 6. Sägeblattschlüssel
- 7. Knebelschraube
- 8. Schiebestock
- Sechskantschlüssel 4mm,5mm

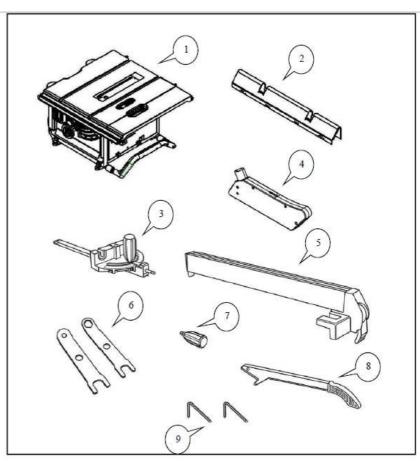




# 6.4 Montage der Knebelschraube

Montieren Sie die Knebelschraube am Handrad wie in der Abbildung dargestellt.

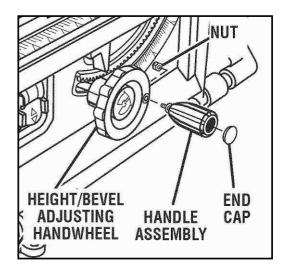

# 6.5 Aufbau der Tischverlängerung

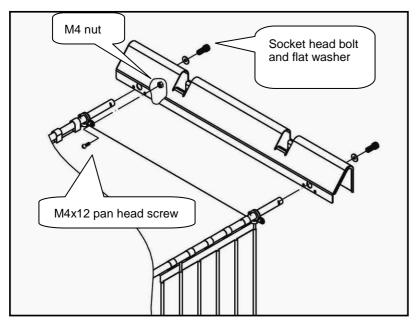

Ziehen Sie den Schaft heraus und lösen Sie die Schraube samt Beilagscheibe.

Gehen Sie sicher, dass das Zapfenende des Schafts in das Loch der Tischverlängerung.



# 6.6 Installation des Spaltkeils und Sägeblattschutzes


Entfernen Sie die Tischeinlage.


Heben Sie das Sägeblatt indem Sie das Handrad im Uhrzeigersinn drehen. Schließen Sie den Release-Hebel durch in die Höhe ziehen desselben.

Setzen Sie das Messer in Position bis die inneren Stifte greifen.

Verschließen Sie den Release-Hebel indem Sie ihn hinunter drü-

cken. Bauen Sie die Tischeinlage wieder ein.

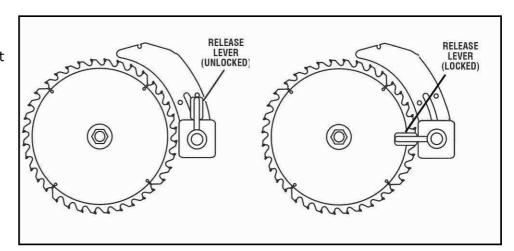

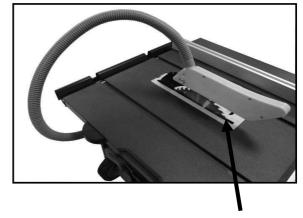



#### 7 BEDIENUNG

#### 7.1 Einstellfunktionen


#### 7.1.1 Handrad zum Einstellen der Schnitthöhe

Die Schnitthöhe kann mit dem Handrad stufenlos verstellt bzw. eingestellt werden.

Das Sägeblatt sollte so eingestellt werden, dass es etwas höher als das Werkstück ist. Durch Drehen des Handrads im Uhrzeigersinn senkt sich das Sägeblatt bzw. durch Drehen des Handrads gegen den Uhrzeigersinn hebt sich das Sägeblatt.

#### 7.1.2 Winkelverstellung des Sägeblattes

Das Sägeblatt kann mit dem Handrad (d) stufenlos, von der vertikalen Position (0°) bis 45° verstellt werden. Mit dem Fixierhebel (a) kann die gewünschte Position fixiert werden.

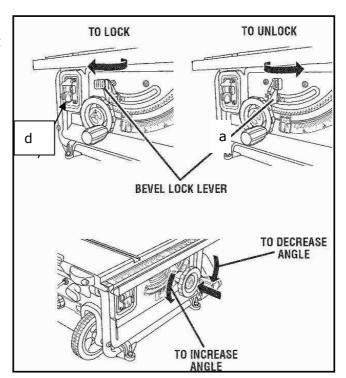

## 7.1.3 Gehrungslineal

Das Gehrungslineal wird verwendet Winkelschnitte präzise und einfach durchführen zu können.





# 7.2 Sägeblattwechsel

**VORSICHT**: Tragen Sie stets Arbeitshandschuhe zum Wechseln des Sägeblattes um Verletzungen zu vermeiden.


Trennen Sie die Tischkreissäge von der Stromversorgung.

Heben Sie das Sägeblatt, entfernen Sie den Blattschutz, die Rücklaufsperre und die Stichplatte.

Versichern Sie sich, dass der Hebel nach rechts gelegt ist. Heben Sie das Sägeblatt durch Drehen des Handrads komplett heraus. Halten Sie (a) und (b) fest, ziehen Sie (b) Richtung Vorderseite der Maschine.

Entfernen Sie die Sägeblattnuss (c) und die Beilagscheibe (d)

Entsperren Sie den Release-Hebel und entfernen Sie das Sägeblatt.

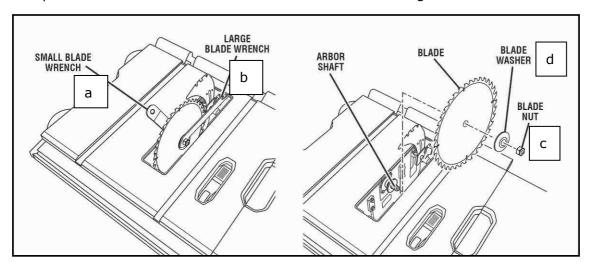

Um ein anderes Sägeblatt einzusetzen platzieren Sie das Sägeblatt auf dem Spindelschaft (die Sägeblattzähne müssen nach unten zur Frontseite zeigen um richtig zu funktionieren). Ziehen Sie die Schrauben vorsichtig zu. Legen Sie den Release-Hebel um und bewegen Sie das Sägeblatt händisch um die vorherige Montage zu überprüfen.

Senken Sie das Sägeblatt ab und setzen Sie die Platte wieder auf.

# 7.3 Überprüfung des Anschlags


Heben Sie den Hebel (locking lever) um den Anschlag bewegen zu können.

Legen Sie ein Winkellineal neben das Sägeblatt und bewegen Sie den Anschlag bis zu diesem. Stellen Sie die Dimension auf der Skala ein.

Bewegen Sie den Anschlag zurück und drehen Sie das Winkellineal um 180°, um die Parallelität des Anschlags zu überprüfen.

Wenn die Parallelität nicht gegeben ist, lockern Sie die zwei Schrauben auf dem Anschlag und richten Sie den Anschlag neu aus.

Ziehen Sie die zwei Schrauben wieder an.

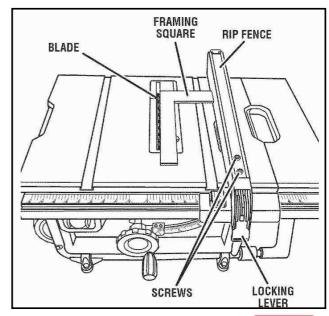


Seite 16




# 7.4 Arbeiten mit der Tischverbreiterung

Sie können den Tisch durch die Tischverbreiterung manuell verbreitern. Ziehen Sie den Hebel in Ihre Richtung an, um ihn zu entsichern. Danach lassen Sie die Verbreiterung in die gewünschte Länge gleiten. Wenn sich die Tischverbreiterung in der gewünschten Position befindet, muss der Hebel wieder in die Ausgangsstellung bewegt werden.

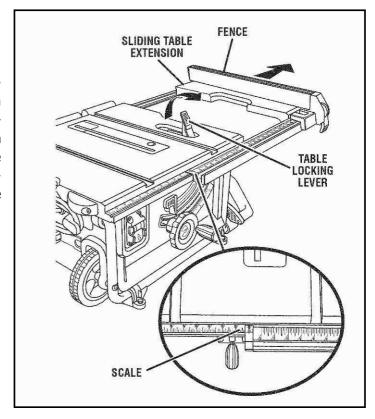

# 7.5 Transport der Kreissäge

Drücken Sie den Knopf und ziehen oder drücken Sie den Hebel in das Griffrohr. Halten Sie den Teleskopgriff fest und ziehebn Sie die Säge an sich bis sie auf den Rädern steht.

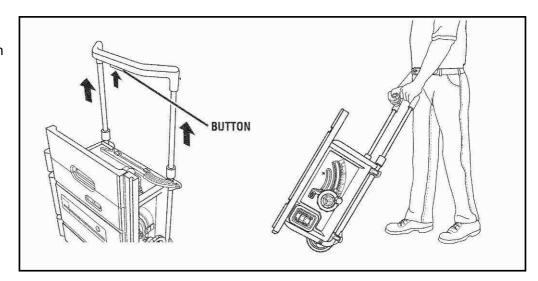



#### 8 WARTUNG





Bei Reinigung und Instandhaltung bei angeschlossener Maschine: Sachschäden und schwere Verletzungen durch unbeabsichtigtes Einschalten der Maschine möglich!

#### Daher gilt:

Vor Wartungsarbeiten Maschine ausschalten und von der Spannungsversorgung trennen



- Störungen oder Defekte, die die Sicherheit der Maschine beeinträchtigen können, umgehend beseitigen lassen.
- Die vollständige und regelmäßige Reinigung der Maschine garantiert eine lange Lebensdauer und stellt eine Sicherheitsvoraussetzung dar. Verwenden Sie ausschließlich milde Reinigungsmittel, d.h. kein Benzin, Petroleum, Soda etc ...
- Prüfen Sie regelmäßig, ob die Warn- und Sicherheitshinweise an der Maschine vorhanden und in einwandfrei leserlichem Zustand sind.
- Prüfen Sie vor jedem Betrieb den einwandfreien Zustand der Sicherheitseinrichtungen.
- Bei Lagerung der Maschine darf diese nicht in einem feuchten Raum aufbewahrt werden und muss gegen den Einfluss von Witterungsbedingungen geschützt werden.
- Kontrollieren Sie zumindest wöchentlich alle Schraubverbindungen auf festen Sitz.
- Die Beseitigung von Defekten erledigt Ihr Fachhändler
- Reparaturtätigkeiten dürfen nur von Fachpersonal durchgeführt werden



# 9 PREFACE

#### **Dear Customer!**

This manual contains Information and important instructions for the installation and correct use of the Mobile Table Saw TS 255M.

This manual is part of the machine and may not be stored separately from the machine. Save it for later reference and if you let other persons use the machine, add this instruction to the machine.

#### Please read and follow the safety instructions!

Before first use read this manual carefully. It eases the correct use of the machine and prevents misunderstanding and damages of machine and the user's health.

Due to constant advancements in product design, construction pictures and content may diverse slightly. However, if you discover any errors, inform us please with the product feedback form. Technical specifications are subject to changes!

# Copyright

© 2011

This document is protected by international copyright law. Any unauthorized duplication, translation or use of text of this manual will be pursued by law.

Court of jurisdiction is A-4020 Linz, Austria!

#### **Customer Service Contact**

#### **HOLZMANN MASCHINEN GmbH**

Marktplatz 4
A-4170 Haslach
Tel 0043 7289 71562 - 0
Fax 0043 7289 71562 - 4
service@holzmann-maschinen.at



# **10TECHNICS**

# 10.1 Technical data

No.	Specification	Parameter
1	Motor	1800W
2	Table Size	580x640 mm
3	Extended Table Size	145x640 mm
4	Saw Blade	Ф254ХФ30Х2.6Х1.8
5	Cutting thickness	90°82mm / 45°58mm
6	Blade angle	90°~45°
7	Max. Ripping Capacity	645mm
8	Blade Speed	4500 RPM
9	Weight	38KG



#### 11 SAFETY GUIDELINES

# 11.1 Proper usage

Holzmann Maschinen cannot be held responsible for any injuries or damages if there was performed manipulation or adjustments to the machine.

For another usage and resulting damages or injuries HOLZMANN MASCHINEN doesn't assume any responsibility or guarantees.

#### 11.2 Incorrect usage

- Operation of the machine that doesn't agree with this manual is forbidden!
- Operation without the safety devices is not allowed.
- You mustn't remove the safety devices!
- Incorrect is the usage for materials which aren't mentioned in this manual.
- Changes of the machine's construction are forbidden.

For another usage and resulting damages or injuries HOLZMANN MASCHINEN doesn't assume any responsibility or guarantees.

## 11.3 Safety instructions

Warning labels and/or other labels on the machine must be replaced when they were removed.



Do not operate the machine at insufficient lighting conditions.

Do not operate the machine outdoors.

Do not operate the machine when you are tired, when your concentration is impaired, and/ or under the influence of drugs, medication or alcohol.



Climbing onto the machine is forbidden! Heavy injuries by falling down or by tilting of the machine are possible.



The machine shall be used only by trained persons.

Non authorized persons, especially children, shall be kept away from the work area.





Do not wear loose clothing, long hair openly or loose jewellery like necklaces etc. when operating the machine

They might be catched by rotating parts and cause serious injuries.



Use proper safety clothing and devices when operating the machine (, safety goggles, ear protectors, safety shoes ...)! Do not wear safety gloves for operating because they decrease the working accuracy and they might be pulled into the saw blade.





Before any maintenance you have to disconnect the panel saw from the power source. Never use the plugged cable for transporting or manipulating the machine.

- Operator must read the instruction carefully before operating the machine, and the manager of safety department should assure the operator knows the requirements well.
- The operation, maintenance and repair of the machine must be done by qualified person who have been trained to have the ability to forecast the potential risks. Only safety-conscious persons who are fully aware of the risks can operate the machine.
- To those people who assemble, operate, or maintain the machine must be confirmed to have read and understood the operating instructions.
- After stopping the machine, the tool will still run for a period of time due to inertia, do not open the tool guard and touch the tool with your hand before it comes to stop running.
- Do not detach or modify any part of the safety guard. The machine should be disconnected from the power supply during maintenance or repair.

# WARNING! NEVER CONTACT THE CUTTERS AND OTHER DRIVING PARTS WITH HANDS IF THEY ARE STILL MOVING

- Assign special persons to operate, maintain and adjust the machine.
- Operate the machine in technically perfect condition. Only the producer or qualified person can completely repair the machine.
- Stop the machine immediately if abnormal phenomena appear, check and repair the machine by specialized persons in time.
- Disassembly and assembly the machine with the hoisting equipment, which is of enough load capacity.
- Observe all safety instructions and warnings attached to the machine, make sure they are always complete and perfectly legible.
- Do safety inspection before operating. Ensure the stroke limit switches, stop block and emergency stop button safe and reliable.
- Reinstall the removed guards and safety devices in place after maintaining.
- Do maintenance or adjustment only after switching the machine off and disconnecting the machine from the power source.
- Always keep children away from the machine. Operating personal must be at least 18 years old.
- Do not wear loose clothing, gloves, neckties or jewelry (rings, watches, etc). Keep the sleeves and the edges of the work uniform tight. Always be sure to wear safety goggles and wear safety shoes during operation.
- Put the long hair into a safety hat during operation no matter the operator is a man or a woman.
- It is recommended to wear suitable hearing protection equipment when necessary to reduce the risk of hearing loss.
- Provide adequate light around the machine, and keep the perimeter around the machine dry, clean and in good order. In addition, do not place anything near the machine; otherwise it becomes an obstacle during operation.
- Do not remove the guards from their working place during operation.



- Disconnect the power supply before leaving the machine.
- Restart the machine only after the guards and safety devices are replaced to their position and in their good function.
- Do not place tools, work pieces, or other items, which not be in use on the machine, especially on the moving parts.
- Clamp workpiece and tools completely and reliably and take off the wrench from chuck before starting the spindle running.
- Stop the machine before adjusting the position of the coolant nozzles.
- Do not use compressed air to remove dust and chips etc. deposited on the machine, switchboard, control unit etc.
- Both operators and the maintenance men should read the descriptions carefully on the caution plate attached on the machine. They should observe the OPERATION MANUAL in their work. During operation and maintenance, care should be taken so that this caution plate is not dirtied or damaged.
- Always bear in mind where the emergency stop button is so that you can operate it without delay in case of an emergency.
- Start the machine according to the starting procedures strictly.
- Keep your hands away from the moving parts of the machine during operation.
- When removing chips caught around the tooling system, avoid taking them out directly by hand, there is cutting hazards. It is safer with proper tool when doing this. Be sure to stop the machine when removing chips from the machine.
- Prior to starting test operation, read this manual carefully so as to be familiar with this machine.
- Contact the manufacturer if for some reason the OPERATION MANUAL should become unreadable.
- When install a tool, stop the spindle and the feed in each axis.
- The machine is low-maintenance. It's not necessary to dismount any parts of the machine. Repairs only by specialists!
- Accessories: Only use accessories recommended by Holzmann Maschinen.

# 11.4 Safety devices for the mobile table saw TK 255M

- The machine must be equipped with a table length extension if second person is working at the circular saw bench removing cut workpieces. The second person may not stand anywhere else but at the take-off table end.
- The working space on the machine must be free of chips and wood scrap.
- Wear only close-fitting clothes. Remove rings, bracelets and other jewelry.
- Pay attention to the rotational direction of the motor see Electrical Connection.
- The safety mechanisms on the machine may not be removed or rendered unusable.
- Cleaning, changing, calibrating, and setting of the machine may only be carried out when the motor is switched off. Pull the power supply plug and wait for the rotating tool to completely stop.
- Switch the machine off and pull power supply plug when rectifying any malfunctions.
- When working on the machine, all safety mechanisms and covers must be mounted



- Use only sharpened, nick-free and non-deformed saw blades
- The splitting wedge is an important safety feature. The workpiece is fed through the splitting wedge which prevents the cut from closing behind the saw blade and also prevents the workpiece from kicking back.
- Lower the cover onto the workpiece during every working operation. It must stand horizontal above the saw blade
- Always use a push-stick for longitudinal cuts of narrow workpieces (less than 120 mm). The push-stick must be used to prevent you from having to work with your hands near the saw blade. Stop the machine to repair a failure or remove pieces of wood which have become jammed. Disconnect the mains plug.
- The table insert must be renewed when the saw slot is worn. Pull power supply plug.
- When leaving the work place, switch the motor off. Pull the power supply plug.
- Cut off the external power supply of the machine or plant even if only minor changes of place are envisaged. Properly reconnect the machine to the supply mains before recommissioning.
- Connection and repair work on the electrical installation may be carried out by a qualified electrician only.
- All protection and safety devices must be replaced after completing repair and maintenance procedures.
- Remove adjusting keys and wrenches. From habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
- Don't overreach. Keep proper footing balance at all times.
- Avoid accidental starting. Be sure switch is off when plugging in any tool.
- Use the right direction of feed. Feed work into a blade or cutter against the direction of rotation of blade or cutter only.
- Turn the power off. Don't leave tool until it comes to a complete stop.
- Protect your lungs. Wear a face or dust mask if the cutting operation is dusty.
- Protect you hearing. Wear hearing protection during extented periods of operation.
- Use only correct blades. Do not use blades with incorrect size holes. Never use blade
  washers or blade bolts that are defective or incorrect. The maximum blade capacity of
  your saw is 10 in. (254mm).

#### Use only as authorized

- The machine has been built in accordance with state of the art standards and the recognized safety rules. Nevertheless, its use may constitute a risk to life and limb of the user or of third parties or cause damage to the machine and to other material property.
- The circular saw bench is constructed exclusively for the sawing of wood. The required saw blade should be inserted according to the cut type and the wood type (solid wood, chip board or plywood).
- The machine must only be used in technically perfect condition in accordance with its designated use and the instructions set out in the operating manual, and only by safety-conscious persons who are fully aware of the risks involved in operating the machine. Any functional disorders, especially those affecting the safety of the machine, should therefore be rectified immediately.

- Any other use exceeds authorization. The manufacturer is not responsible for any damages resulting from unauthorized use; risk is the sole responsibility of the operator.
- The safety work and maintenance instructions of the manufacturer as well as well as the technical data given in the calibrations and dimensions must be adhered to.
- Relevant accident prevention regulations and other, generally recognized safety-technical rules must also be adhered to
- The Table Circular Saw may only be used, maintained, and operated by operated by persons familiar with and instructed in its operation and procedures. Arbitrary alterations to the machine release the manufacturer from all responsibility for any resulting damages
- The Table Circular Saw may only be used with original accessories and saw blades from the manufacturer.
- Remove all fences and auxiliary table before transporting saw. Failure to do so can result in an accident causing possible serious personal injury.
- Always secure work firmly against the rip fence or miter gauge. Never use the rip fence during the same operation as the miter gauge.
- Never stand or have any part of your body in line with the path of the saw blade.
- Move the rip fence out of way when cross cutting.
- Do not use the miter gauge and rip fence during the same operation.
- Never use rip fence as cutoff gauge when cross cutting.
- Avoid kickbacks (work thrown back toward you) by :

Keeping blade sharp.

Keeping rip fence parallel to saw blade.

Not releasing the work before it is pushed all the way past the saw blade using a push stick.

Not ripping work that is twisted or warped or does not have a straight edge to guide along the fence.

## 11.5 Remaining risks

The machine has been built using modern technology in accordance with recognized safety rules. Some remaining hazards however, may still exist.

- The rotating saw blade can cause injuries to fingers and hands if the work piece is incorrectly fed
- Thrown work pieces can lead to injury if the work piece is not properly secured or fed such as working without a limit stop
- Noise can be a health hazard. The permitted noise level is exceeded when working. Be sure to wear personal protective gear such as ear protection.
- Defective saw blades can cause injuries. Regularly inspect the structural of saw blades.
- The operating instructions supplied with the special accessories must be observed and carefully read when special accessories are used.
- Even when all safety measures are taken, some remaining hazards which are not yet evident may still be present
- Remaining hazards can be minimized by following the instructions in "Safety Precautions ","Proper Use "and in the entire operating manual.



- Hearing damages when the customer doesn't use hearing protection.
- Danger of injuries by kickback or spinning round of the work piece or parts of it.
- Danger by inhaling poisonous dust of chemical treated work pieces.

These risks can be minimized when all the safety instructions are applied, the machine is maintained well and the machine is operated by specialists. Never the less your healthy common sense and your technical training are the most important things for operating a machine like the TS 255M.

#### 11.6 Electrical Connection

The electric motor is connected in a ready -to -operate state.

#### 11.6.1 Faulty electrical connecting leads

Insulation damage often occurs at electrical connecting leads.

Causes include:

- Pressure marks caused when connecting leads are run through windows or the cracks of doors.
- Folds caused by the improper attachment of running of the connecting leads.
- Cuts resulting from the crossing of the connecting lead.
- Insulation damages caused by the ripping out of the connecting lead from the wall socket
- Cracks due to the ageing of the insulation.

Faulty electrical connecting leads such as these may not be used and are highly dangerous due to the insulation damage.

Check electrical connecting leads regularly for damage. Ensure that the connecting lead is not attached to the mains supply when you are checking it.



#### 12ASSEMBLY

#### 12.1 Recommended Accessories

To avoid injury:

- Use only accessories recommended for this machine.
- Follow instructions that accompany accessories. Use of improper accessories may cause hazards.
- Use only accessories designed for this table saw to avoid injury from thrown broken parts or workpieces.
- Do not use any accessory unless you have completely read the instruction or operator's manual for that accessory.

**Included in delivery**: HM - circular-saw blade 36 teeth, table extension on the right, mitre fence, parallel fence, pushing stick

#### 12.2 UNPACKING AND CHECKING CONTENTS

Carefully unpack the table saw and all its parts, and compare against the illustration following.

#### **WARNING:**


- To avoid injury from unexpected starting, do not plug the power cord into a power source receptacle during unpacking and assembly. This cord must remain unplugged whenever you are assembling or adjusting the machine.
- If any part is missing or damaged, do not plug the machine until the missing or damaged part is replaced, and assembly is complete.
- To protect the table saw from moisture, a protective coating has been applied to the machined surfaces. Remove this coating with a soft cloth moistened with kerosene.

**WARNING:** To avoid fire or toxic reaction, never use gasoline, naphtha, acetone, lacquer thinner or similar highly volatile solvents to clean the table saw.

Unpack carton; check your machine to see parts listed below:



- 1. Table saw
- 2. Out feed support
- 3. Miter gauge
- 4. Blade guard
- 5. Rip fence
- 6. Blade wrench
- 7. Handle assembly
- 8. Push stick
- 9. Hex wrench 4mm ,5mm

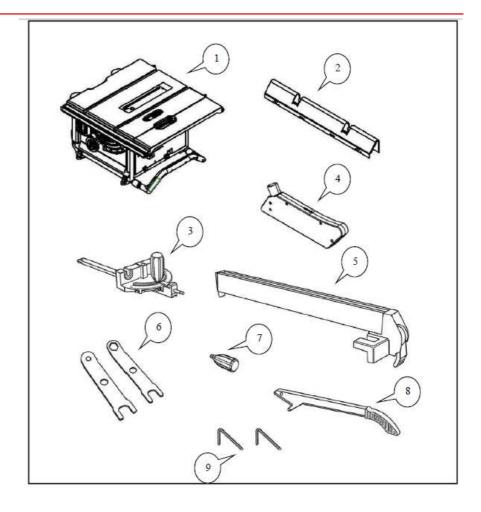

Carefully lift the saw from the carton and place it on a level work surface.

Inspect the tool carefully to make sure no breakage or damage occurred during shipping.

**WARNING**: If any parts are damaged or missing, do not operate this tool until the missing parts are replaced. Failure to do so could result in possible serious personal injury.

**WARNING**: Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

# 12.3 Installation of handle assembly

Lift the end cap off the handle assembly using a flat blade screwdriver.


Hold the nut securely and turn the screw counterclockwise to remove the nut completely.

Place the nut into the recessed hole on the back of the height/bevel adjusting handwheel and hold in place.

Slide the handle and screw into the hole on the height/bevel adjusting handwheel.

Using the hex wrench, turn the screw clockwise and tighten in place.

Push the end cap back in place on the end of the handle.

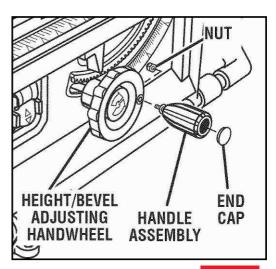



## Installation of the out feed support


Pull out the shaft , release the socket head bolt and flat washer

Install the out feed support.

Make sure the tenon end of the shaft is fitting the hole of out feed support.

Replace the socket head bolt and flat washer.

Fix the chip bag assembly to the out feed support using M4x12 pan head screw and M4 hex nut.

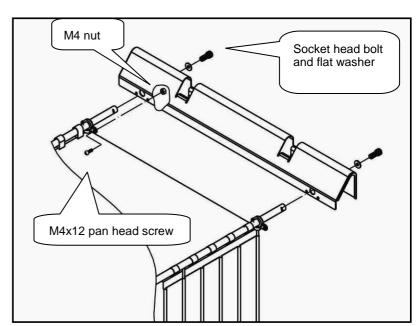

# 12.5 Installation of the riving knife and blade guard

Remove the throat plate, place your index finger in the hole and lift the front end pulling the throat plate out toward the front of the saw.

Raise the saw blade by turning the height/bevel adjusting the handwheel counterclockwise.


Unlock the release lever by pulling it up.


Place the riving knife into the position until the internal pins are engaged.

Lock the release lever by pushing the lever down.

Reinstall the throat plate.

Mount the blade guard assembly to the riving knife and fix the hose to the blade guard

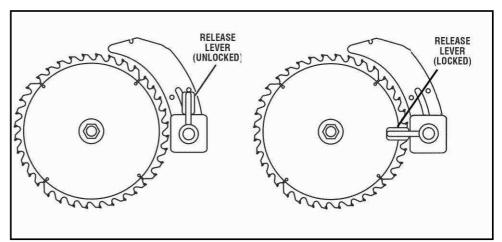

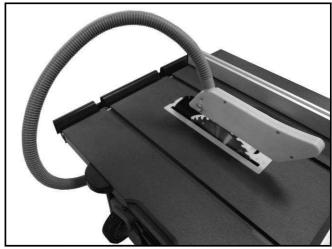

Seite 29



## 13 OPERATION INSTRUCTIONS

# 13.1 Working environment

The circular saw is designed for operating on the site:

- The height above sea level doesn't exceed 1000m.
- The ambient temperature range doesn't exceed 5°C~40°C.
- The relative humidity doesn't exceed 50% within +40°C and 90% within +20°C.
- Transportation temperature range is within-25°~+55°
- The light in the working environment should not be lower than 500 lux.

Do not use the machine in an environment of electric dirt, explosion, metal fretted, gas and steam which can destroy insulation .


Do not use the machine in an environment of impact and vibration.

## 13.2 Moving the saw

Press the button and pull out or push the handle into the handle tube.

Hold the telescoping handle firmly, tilt the saw toward you until the saw is balanced on the wheels.

Pull the saw to the desired location then either mount to a firm supporting surface such as a workbench or leg stand for immediate saw operation or store the saw in a dry environment.

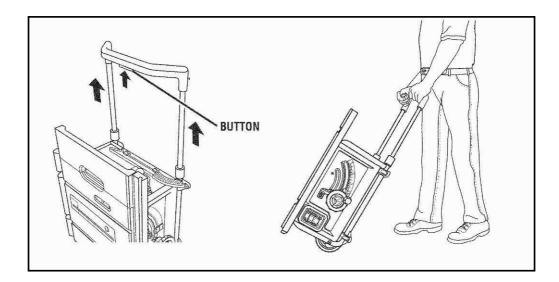




## 13.3 Changing the blade depth

The blade depth should be set so that the outer points of the blade are higher than the workpiece by approximately 1/8 in to 1/4 in but the lowest points(gullets) are below the top surface.

Push the bevel locking lever to the left for elevation mode.

Raise the blade by turning the height/bevel adjusting handwheel counterclockwise or lower it by turning the handle clockwise.

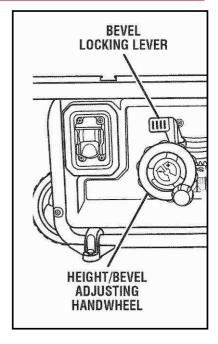


# 13.4 Changing the blade angle

Unplug the saw.

Loosen bevel control by pushing the bevel lock lever all the way to the right.

To unlock, just the bevel control by pushing the wheel in toward the saw then turning it. Turning the wheel counterclockwise increases the angle of the blade, bringing it closer to 45°. Turning it clockwise decreases the angle, he blade closer to 90°.

To lock tighten bevel control by pushing the bevel lock lever to the left.

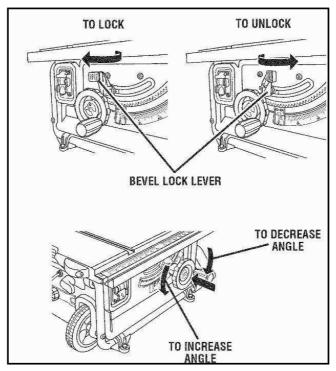

#### 13.5 Using the extension table


Increase the length of the saw table by using the table extension.

Pull the front table locking lever toward you to unlock the lever.

Slide the table extension to the desired width.

Once the extension table is set to the desired width, We lock the lever by pushing the lever back towards the saw base.



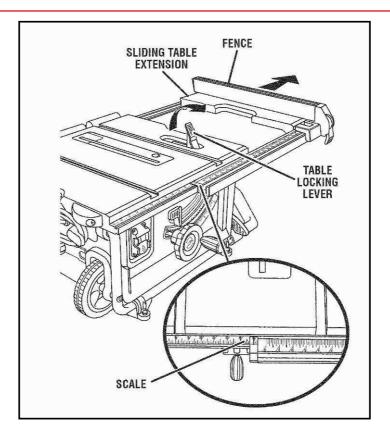

# 13.6 Cutting with the rip fence


For safe and clean working, choose a minimal saw blade projection for the workpiece.

Place the rear lip on the rear of the saw table and pull slightly toward the front of the unit.

Lower the front end of the rip fence onto the guide surfaces on top of the front rail.

Push the locking lever down to automatically align and secure the fence.


Check for a smooth gliding action. If adjustments are needed, see To Check the Alignment of the Rip Fence to the Blade in the Adjustment section of this manual.

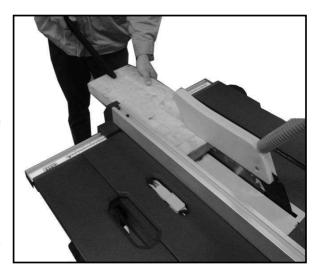

#### 13.7 Cutting with the mitern gauge

The miter gauge provides greater accuracy in angled cuts. For very close tolerances, test cuts are recommended.

There are two miter gauge channels, one on either side of the blade. When making a 90°cross cut, you can use either miter gauge channel. When making a beveled cross cut(the blade tilted in relation to the table) the miter gauge should be located in the slot on the right so

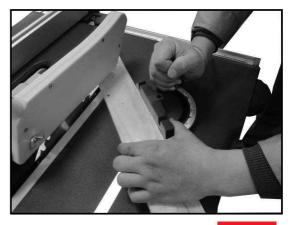

Seite 32



that the blade is tilted away from the miter gauge and your hands.

The miter gauge can be turned 60° to the right or left.

Loosen the lock knob.

With the miter gauge in the miter gauge slot, rotate the gauge until the desired angle is reached on the scale.

Retighten the lock knob.

## 13.8 Adjustment

#### 13.8.1 Replace the plate

Unplug the saw.


Raise the saw blade, remove the blade guard, pawls, and throat plate.

Make sure the bevel locking lever is securely pushed to the left. Raise the saw blade to its full height by turning the height/bevel adjusting handwheel clockwise.

Using the smaller end of the larger blade wrench over the hex nut. Holding both wrenches firmly, pull the large wrench forward to the front of the machine.

Remove blade nut and blade washer.

Unlock the release lever and remove the saw blade.

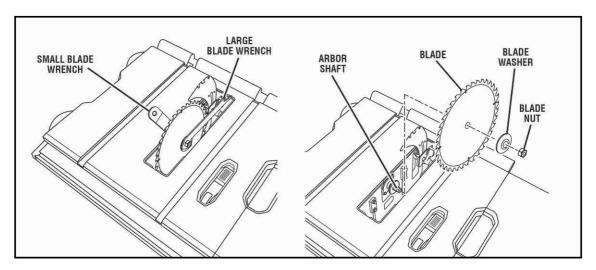

To replace the blade with an accessory blade, follow the instructions provided with the accessory.

To install a standard blade:

Place the new blade on the arbor shaft(the teeth must point down toward the front of the saw to work properly) . Tighten securely.

Lock the release lever.

Rotate the blade by hand to make sure it turns freely.

Lower the saw blade and reinstall the throat plate.



# 13.8.2 Check the alignment of the rip fence to the blade

Unplug the saw.


Raise the locking lever to permit the rip fence to be moved.

Place a framing square beside the blade and move the rip fence up to the square. Take the dimension on the rip scale.

Move the fence back and turn the framing square 180° to check the other side.


If the two dimensions are not same, loosen the two screws on the fence and align it

Retighten the two screws.

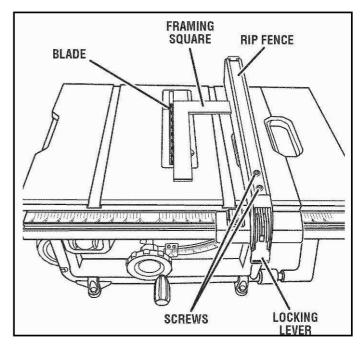


# 13.9 Foldaway stand

The stand have four circular rubber feet, the machine can be placed steadily by adjusting the four feet.

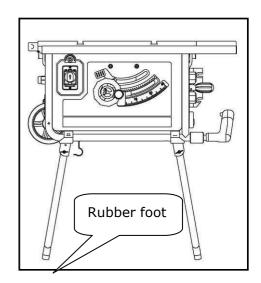

When moving the machine is needed, follow the later steps.


Loosen enough the thumb screw and turn right the left leg, then carefully put the wheel upon the floor just like the following fig.

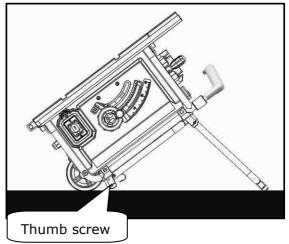




Place the machine on the floor supporting by wheels and the block of table.


Loosen enough the Thumb screws and pull out the right leg, then turn left the right leg.

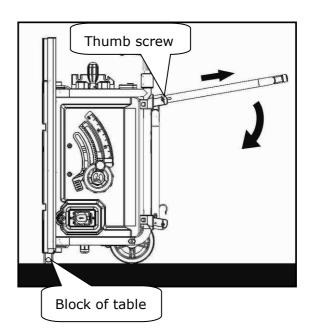

Fix the left and right leg to the machine by the hook.

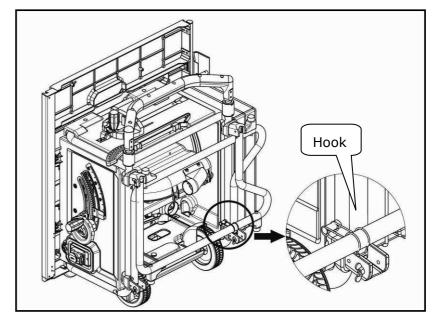

Now you can pull out the handle and move the machine.

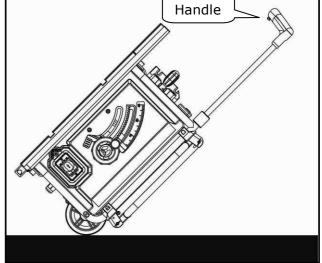

When using the machine is needed, follow opposite steps.

 $\mbox{HOLZMANN Maschinen Austria} \ \ \xi \ \ \mbox{www.holzmann-maschinen.at}$ 



**Warning**: Turn off the machine and disconnect from the power supply before conducting maintenance work or settings.

Store the manual close to the machine.

Keep the machine clean.

Wear goggles when cleaning the machine.

**Caution**: Do not clean synthetic components of the bench using aggressive cleaning agents. We recommend a mild dish washing liquid. The machine must not get into contact with water.

- Check the saw blade regularly. Use only well-sharp-ended, crack-free and not distorted saws. Use only tools that comply with the European standard EN 847-1
- Exchange immediately table lining that run out.
- Always keep table surface non resinous.
- Clean regularly the inner section of the machine of wood and chip rests.
- Remove possible sawdust blockages at the discharge.




## 15 TROUBLESHOOTING

## At first you must disconnect the machine from the power supply.

PROBLEM	CAUSE	SOLUTION
Excess vibration	Blade is out balance.	Replace blade.
	Blade is damaged.	Replace blade.
	Saw is not mounted securely.	Tighten all hardware.
	Work surface is uneven.	Reposition on flat surface.
	Blade is warped.	Replace blade.
Rip fence does not	Rip fence not mounted correctly.	Remount the rip fence.
move smoothly.	Rails are dirty or sticky.	Clean and wax rails.
	Clamp screw is out of adjustment.	Adjust clamp screw.
Rip fence does not lock at rear.	Clamp screw is out of adjustment.	Adjust clamp screw.
Cutting binds or	Blade is dull.	Replace or sharpen blade.
ourns work.	Working is fed too fast.	Slow the feed rate.
	Rip fence is misaligned.	Align the rip fence.
	Spreader is out of alignment. Wood is warped.	Replace the wood. Always cut with convex side to table surface.
Wood edges away	Ripping fence is misaligned.	Check and adjust the rip fence.
from rip fence when ripping.	Positive stops inside cabinet need	
Saw does not make	adjusting(Bevel Cuts).	Adjust positive stops.
accurate 90ºor 45º cuts.	Miter gauge is misaligned(Miter Cuts)	Adjust the miter gauge.
Height/bevel adjust- ing handwheel is hard to turn.	Gears or post inside cabinet are clogged with saw dust.	Clean the gears or screw post.
Saw does not start.	Motor cord or wall cord is not plugged	Plug in motor cord or wall cord.
	in.	Replace circuit fuse.
	Circuit fuse is blown.	Reset circuit breaker.
	Circuit breaker is tripped.  Cord or switch is damaged.	Have the cord or switch replaced.
Blade makes poor	Blade is dull or dirty.	Clean, sharpen, or replace blade.
cuts.	Blade is wrong type for cut being made.	Replace with correct type.
	Blade is mounted backwards.	Remount blade.
Blade does not lower when turning height /bevel adjusting handwheel.	Locking lever is not at full left position.	Move locking lever to left.
Motor labors in rip cut.	Blade not proper for rip out.	Change blade; rip blade typically has fewer teeth.

## **16ERSATZTEILE/SPARE PARTS**

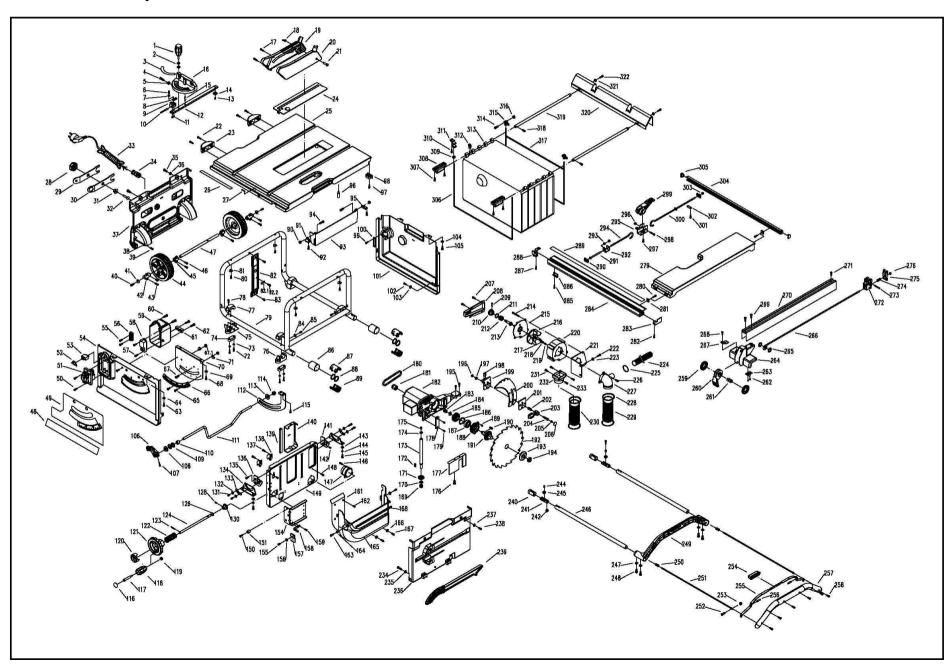



1 Index plate handle         30 Open-end wrench 2           2,1 Washer         31 Wrench seat           2,2 Flat washer 6 (φ6Χφ12X1.6)         32 Bolt M8X35           3 Index plate rulers         33 Wire VDE1.5mm2X2.2m           4 Cross Recess Head Screw M6X20         34 Wire fixed           5 Hexnut M6         35 Cross Recess Head Screw M5X12           6 ST4.2X13         37 Left cover           8 Index plate pointer         38 Big washer 5 (φ5Χφ15X1.2)           9 Locating pin seat         39 ST3.5X16           10 Locating pin         40 Hexagon socket button head screws M6X35           11 Cross recessed countersunk head tapping screws ST4.2X13         41 circular arc spacer 1           12 Index plate guide ruler         42 Locating sleeve 1           13 Masher         44 Caster (φ150Xφ12.7)           14 Washer         44 Caster (φ150Xφ12.7)           15 Bolt         45 Locating sleeve 2           16 Index plate         46 Cross recessed pan head tapping screw ST3.5X16           17 Cross recessed countersunk head tapping screw ST3.5X16         45 Locating sleeve 2           16 Index plate         46 Cross recessed pan head tapping screw ST3.5X16           17 Cross recessed countersunk head tapping screw ST3.5X16         45 Locating sleeve 2           17 Cross recessed countersunk head tapping screw ST3.5X16         46 Cross r			20	
2.2   Flat washer 6 (φ6Xφ12X1.6)   32   Bolt M8X35		,		
3	2,1		31	Wrench seat
4 Cross Recess Head Screw M6X20 34 Wire fixed 5 Hexnut M6 35 Cross Recess Head Screw M5X12 6 Cross recessed pan head tapping screws 36 Big washer 5 (φ5xφ15X1.2) 7 Flat washer 4 (φ4xφ9x0.8) 37 Left cover 8 Index plate pointer 38 Big washer 4 (φ4xq12X1) 9 Locating pin seat 39 Cross recessed pan head tapping screw S73.5X16 10 Locating pin 40 Hexagon socket button head screws M6X35 11 Cross recessed countersunk head tapping screws S74.2X13 12 Index plate guide ruler 41 Cross recessed countersunk head screw M6X8 S73.5X16 13 Cross recessed countersunk head screw M6X8 S73.5X16 14 Washer 44 Caster (φ150Xφ12.7) 15 Bolt 45 Locating sleeve 1 16 Index plate 46 Cross recessed pan head tapping screw S73.5X16 17 Cross recessed countersunk head tapping screw S73.5X16 18 Butterflynut M6 48 Warning nameplate 49 Left Protective guard of Saw 49 Front panel nameplate 49 Right Protective guard of Saw 49 Front panel nameplate 49 Right Protective guard of Saw 573.5X13(第序) Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 54 Front panel Supporting block 573.5X19 14 Insert panel 54 Front panel Protector nameplate 55 Cross recessed pan head tapping screw S73.5X19 15 Major working table 55 Cross recessed pan head tapping screw S73.5X19 16 Major working table 57 Cross recessed pan head tapping screw S73.5X13 (Right) Signapore S73.5X13	2,2	Flat washer 6 (φ6Χφ12Χ1.6)	32	Bolt M8X35
Feat	3	Index plate rulers	33	Wire VDE1.5mm2X2.2m
Cross recessed pan head tapping screws   ST4.2X13   Flat washer 4 (φ4Χφ9Χ0.8)   37   Left cover   38   Index plate pointer   38   Big washer 4 (φ4Χφ12X1)   Cross recessed pan head tapping screws ST3.5X16   Cross recessed countersunk head tapping   40   Hexagon socket button head screws M6X35   M6X	4	Cross Recess Head Screw M6X20	34	Wire fixed
Flat washer 4(φ4xφ9x0.8) 37 Left cover Reflat washer 4(φ4xφ9x0.8) 37 Left cover Reflat washer 4(φ4xφ9x0.8) 37 Left cover Reflat washer 4(φ4xφ12x1) 38 Big washer 4(φ4xφ12x1) Description of the pointer 39 Cross recessed pan head tapping screw ST3.5x16 Locating pin seat 40 Hexagon socket button head screws M6x35 Locating pin 41 circular arc spacer 1 Cross recessed countersunk head tapping 41 circular arc spacer 1 Cross recessed countersunk head screw 42 Locating sleeve 1 Cross recessed countersunk head screw 43 Cross recessed pan head tapping screw ST3.5x16 Locating sleeve 2 Locating sleeve 2 Cross recessed pan head tapping screw ST3.5x16 Locating sleeve 2 Cross recessed pan head tapping screw ST3.5x16 Cross recessed countersunk head tapping 47 Caster spindle Cross recessed countersunk head tapping screw ST3.5x16 Cross recessed countersunk head tapping 47 Caster spindle Reflective guard of Saw 49 Front panel nameplate Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5x13(#)£ Left Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5x13(#)£ Left Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5x13(#)£ Left Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5x13(#)£ Left Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5x13(#)£ Cross recessed pan head tapping screw ST3.5x13(#)£ Linsert panel 54 Front panel Cross recessed pan head tapping screw ST2.9x19 Cross recessed pan head tapping screw ST2.9x9.5 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9x9.5	5	Hexnut M6	35	Cross Recess Head Screw M5X12
8 Index plate pointer 38 Big washer 4 (ф4Xф12X1) 9 Locating pin seat 39 Cross recessed pan head tapping screw ST3.5X16 10 Locating pin 40 Hexagon socket button head screws M6X35 11 Cross recessed countersunk head tapping 41 circular arc spacer 1 12 Index plate guide ruler 42 Locating sleeve 1 13 Cross recessed countersunk head screw M6X8 43 Cross recessed pan head tapping screw ST3.5X16 14 Washer 44 Caster (ф150Xф12.7) 15 Bolt 45 Locating sleeve 2 16 Index plate 46 Cross recessed pan head tapping screw ST3.5X16 17 Cross recessed countersunk head tapping screw ST3.5X16 18 Butterflynut M6 48 Warning nameplate 19 Left Protective guard of Saw 49 Front panel nameplate 20 Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5X13(制尾) 21 Hexagon-headed bolt M6X30 51 KJD12 Big panel Switch 22 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 23 Supporting block 53 Overcurrent protector 24 Insert panel 54 Front panel 25 Major working table 55 Cross recessed pan head tapping screw ST2.9X19 26 Working table ruler 56 Line bank (5 groups) 27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5	6		36	Big washer 5 (φ5Χφ15X1.2)
9 Locating pin seat 39 Cross recessed pan head tapping screw ST3.5x16 10 Locating pin 40 Hexagon socket button head screws M6X35 directions of ST4.2X13 directions of ST4.2X14 directi	7	Flat washer 4 $(\phi 4X\phi 9X0.8)$	37	Left cover
10 Locating pin seat 40 Hexagon socket button head screws M6X35 41 Cross recessed countersunk head tapping screws ST4.2X13 41 circular arc spacer 1	8	Index plate pointer	38	Big washer 4 (φ4Xφ12X1)
10 Locating pin 40 M6X35  11 Cross recessed countersunk head tapping screws ST4.2X13  12 Index plate guide ruler 42 Locating sleeve 1  13 Cross recessed countersunk head screw 43 Cross recessed pan head tapping screw ST3.5X16  14 Washer 44 Caster (中150X中12.7)  15 Bolt 45 Locating sleeve 2  16 Index plate 46 Cross recessed pan head tapping screw ST3.5X16  17 Cross recessed countersunk head tapping screw ST3.5X16  18 Butterflynut M6 48 Warning nameplate  19 Left Protective guard of Saw 49 Front panel nameplate  20 Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5X13(制尾)  21 Hexagon-headed bolt M6X30 51 KJD12 Big panel Switch  22 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate  23 Supporting block 53 Overcurrent protector  24 Insert panel 54 Front panel  25 Major working table 55 Cross recessed pan head tapping screw ST2.9X19  26 Working table ruler 56 Line bank (5 groups)  27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5	9	Locating pin seat	39	
11 screws ST4.2X13 12 Index plate guide ruler 13 Cross recessed countersunk head screw M6X8 14 Washer 15 Bolt 16 Index plate 17 Cross recessed countersunk head tapping screw ST3.5X16 18 Butterflynut M6 19 Left Protective guard of Saw 20 Right Protective guard of Saw 21 Hexagon-headed bolt M6X30 22 Cross Recess Head Screw M6X12 23 Supporting block 24 Insert panel 25 Major working table 26 Working table ruler 27 Cross recessed pan head tapping screw ST2.9X19 28 Knob of Wrench clamp 58 Cross recessed pan head tapping screw ST3.5X13 (Protective guard of Saw ST3.5X13 (Protective gu	10	Locating pin	40	
Cross recessed countersunk head screw   H	11		41	circular arc spacer 1
M6X8	12	Index plate guide ruler	42	Locating sleeve 1
15 Bolt 45 Locating sleeve 2 16 Index plate 46 Cross recessed pan head tapping screw ST3.5X16 17 Cross recessed countersunk head tapping screw ST2.9X22 18 Butterflynut M6 48 Warning nameplate 19 Left Protective guard of Saw 49 Front panel nameplate 20 Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5X13(制定) 21 Hexagon-headed bolt M6X30 51 KJD12 Big panel Switch 22 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 23 Supporting block 53 Overcurrent protector 24 Insert panel 54 Front panel 25 Major working table 55 Cross recessed pan head tapping screw ST2.9X19 26 Working table ruler 56 Line bank (5 groups) 27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5 28 Knob of Wrench clamp 58 Soft starter	13		43	
16 Index plate 46 Cross recessed pan head tapping screw ST3.5X16 17 Cross recessed countersunk head tapping screws ST2.9X22 18 Butterflynut M6 48 Warning nameplate 19 Left Protective guard of Saw 49 Front panel nameplate 20 Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5X13(割尾) 21 Hexagon-headed bolt M6X30 51 KJD12 Big panel Switch 22 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 23 Supporting block 53 Overcurrent protector 24 Insert panel 54 Front panel 25 Major working table 55 Cross recessed pan head tapping screw ST2.9X19 26 Working table ruler 56 Line bank (5 groups) 27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5 28 Knob of Wrench clamp 58 Soft starter	14	Washer	44	Caster (φ150Xφ12.7)
ST3.5X16   ST3.5X19   ST3.5X19   ST3.5X19   ST3.5X19   ST3.5X19   ST3.5X19   ST3.5X13	15	Bolt	45	Locating sleeve 2
Screws ST2.9X22	16	Index plate	46	
19 Left Protective guard of Saw 49 Front panel nameplate 20 Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5X13(割尾) 21 Hexagon-headed bolt M6X30 51 KJD12 Big panel Switch 22 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 23 Supporting block 53 Overcurrent protector 24 Insert panel 54 Front panel 25 Major working table 55 Cross recessed pan head tapping screw ST2.9X19 26 Working table ruler 56 Line bank (5 groups) 27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5 28 Knob of Wrench clamp 58 Soft starter	17		47	Caster spindle
20 Right Protective guard of Saw 50 Cross recessed pan head tapping screw ST3.5X13(割尾) 51 KJD12 Big panel Switch 52 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 23 Supporting block 53 Overcurrent protector 54 Front panel 54 Front panel 55 Cross recessed pan head tapping screw ST2.9X19 56 Line bank (5 groups) 57 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5 58 Soft starter	18	Butterflynut M6	48	Warning nameplate
ST3.5X13(割尾)   ST3.5X13(alk)   ST3.5X	19	Left Protective guard of Saw	49	Front panel nameplate
22 Cross Recess Head Screw M6X12 52 Overcurrent protector nameplate 23 Supporting block 53 Overcurrent protector 24 Insert panel 54 Front panel 25 Major working table 55 Cross recessed pan head tapping screw ST2.9X19 26 Working table ruler 56 Line bank (5 groups) 27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5 28 Knob of Wrench clamp 58 Soft starter	20	Right Protective guard of Saw	50	
23Supporting block53Overcurrent protector24Insert panel54Front panel25Major working table55Cross recessed pan head tapping screw ST2.9X1926Working table ruler56Line bank (5 groups)27Pipping cord of Front rail57Cross recessed pan head tapping screw ST2.9X9.528Knob of Wrench clamp58Soft starter	21	Hexagon-headed bolt M6X30	51	KJD12 Big panel Switch
24Insert panel54Front panel25Major working table55Cross recessed pan head tapping screw ST2.9X1926Working table ruler56Line bank (5 groups)27Pipping cord of Front rail57Cross recessed pan head tapping screw ST2.9X9.528Knob of Wrench clamp58Soft starter	22	Cross Recess Head Screw M6X12	52	Overcurrent protector nameplate
25 Major working table 26 Working table ruler 27 Pipping cord of Front rail 28 Knob of Wrench clamp 25 Cross recessed pan head tapping screw ST2.9X19 26 Line bank (5 groups) 27 Cross recessed pan head tapping screw ST2.9X9.5 28 Soft starter	23	Supporting block	53	Overcurrent protector
26 Working table ruler 27 Pipping cord of Front rail 28 Knob of Wrench clamp 29 ST2.9X19 20 Line bank (5 groups) 27 Cross recessed pan head tapping screw ST2.9X9.5 28 Soft starter	24	Insert panel	54	Front panel
27 Pipping cord of Front rail 57 Cross recessed pan head tapping screw ST2.9X9.5  28 Knob of Wrench clamp 58 Soft starter	25	Major working table	55	
27 Pipping Cord of Front rail 37 ST2.9X9.5  28 Knob of Wrench clamp 58 Soft starter	26	Working table ruler	56	Line bank (5 groups)
	27	Pipping cord of Front rail	57	
29 Open-end wrench 1 59 Switch Box	28	Knob of Wrench clamp	58	Soft starter
	29	Open-end wrench 1	59	Switch Box



1 4				
60	Cross recessed pan head tapping screw ST3.5X13	87	Guide sleeve of Draw bar 2	
61	Thread tension support plate of Switch		O-ring 24.3X3.55	
62	Cross recessed pan head tapping screw ST3.5X19		Guide sleeve of Draw bar 1	
63	Cross recessed pan head screw M5X12	90	Nut M4	
64	Big washer 5 $(\phi 5X\phi 15X1.2)$	91	Front panel of Splash guard	
65	Cross recessed pan head M4X8	92	Hexagon socket button head screws M5X10	
66	Rack	93	Splash guard	
67	Hexagon socket button head screws M6X12	94	Cross recessed pan head screw M4X12	
67	Hexnut M6	95	Back panel of Splash guard	
68	Hexagon socket button head screws M5X10	96	Bolt	
69	Flat washer 5 (φ5Χφ10X1)	97	Hexagon socket button head screws M6X20	
70	Front panel support	98	Guide block of Back rail	
71	Angle limited spacer		Cross recessed pan head tapping screw ST4.2X13	
72	Cross recessed pan head tapping screw ST3.5X38		Tube clamp	
73	Big washer 4 (φ4Xφ12X1)		Back cover	
74	Land filling block		Cross recessed pan head screw M5X12	
75	Foot margin 2	103	Big washer 5 (φ5Χφ15Χ1.2)	
76	Foot margin 1	104	Cross recessed pan head screw M5X12	
77	Up Cover of Foot margin	105	Big washer 5 (φ5Χφ15Χ1.2)	
78	Cross recessed pan head tapping screw ST3.5X38	106	Fixed wrench for angle of Saw blades	
79	Steel tube supporting	107	Bolt	
80	Hexagon socket button head screws M6X35	108	Circul arc washer	
81	circular arc spacer 2 (working table fixed)	109	Flat washer φ10Xφ20X2	
82	Wire fixed panel	110	Spacer ring	
82	Cord grips	111	Angle fixed Draw bar	
82	Cross recessed pan head screw M4X10	112	Substrate fixed panel	
83	Hexagon socket button head screws M5X10	113	Big washer 10 (φ10Xφ26X2)	
84	Big washer 5 (φ5Xφ15X1.2)	114	Nut M10	
85	Cross recessed pan head screw M5X12	115	Hexagon socket button head screws M6X10	
86	Guide sleeve of Draw bar 3	116	Handle cover	
110171	MANN Maschinon Austria E www.holzmann-maschinon at		0-1-40	



1 44			
117	Handle spindle	149	Substrate
118	Hand wheel handle	150	Cross recessed pan head M6X25
119	Hexnut M6	151	Fixed spacer
120	Hand wheel cover	152	
121	Hand wheel	153	
122	and wheel Spring	154	Joint panel
123	Flexible Round Pin φ3X20	155	Cross recessed pan head screw M4X10
124	Hand wheel Spindle	156	Flat washer 4 (φ4Χφ9Χ0.8)
125		157	Point of Saw blades Angle
126	washer 10	158	Fixed plate of point
127		159	Cross recessed pan head screw M4X10
128	Cross recessed pan head screw M4X20	160	
129		161	Wind screen
130	Bevel gear	162	Hexagon socket button head screws M5X8
131	Hexagon socket button head screws M5X8	163	Cross recessed pan head tapping screw ST3.5X16
132	Big washer 5 (φ5Χφ15X1.2)	164	Fixed ring Splash guard
133	Angle Guide spacer	165	Substrate cover
134	Panel of rail	166	Big washer 5 (φ5Χφ15X1.2)
135	Cross recessed pan head M5X8	167	Cross recessed pan head screw M5X12
136	Front bracket	168	Long Sponge
137	Hexagon socket button head screws M5X10	169	Nut M10
138	Fixed spacer	170	Flat washer 10 (φ10Xφ2012X2)
139	Short Sponge	171	Bevel Gear
140	Wind screen 1	172	Flat key 4X4X14
141	Back bracket	173	Up and down lead screw
142	Hexagon socket button head screws M5X8	174	Big washer 6 (φ6Χφ18Χ1.6)
143	Flat washer 6 (φ6Χφ12Χ1.6)	175	Hexagon socket button head screws M6X10
144	Spring washer 6	176	Cross recessed pan head screw M5X12
145	Hexagon socket button head screws M6X16	177	Wind Wind screen 2
146	Cross recessed pan head screw M4X10	178	Guide block of up and down
147	Air-out Joint	179	Hexagon socket button head screws M6X16
148	Cross recessed pan head tapping screw ST3.5X13	180	Poly V-Belt 116J2 (290.5)
	· · · · · · · · · · · · · · · · · · ·		



4	H			
181	Motor belt pulley	209	Hexagon socket set screws with cup point M6X8	
182	Motor	210	Blet pulley of Fan	
182	Front cover of Motor	211	Ring 26	
183	Ball Bearing61800ZZ	212	Bearing 6000ZZ	
184	Washer 17	213	Spindle of fan	
185	Big gear(43T)	214	Hexagon socket button head screws M5X50	
186	Ring 42	215	Shaft bearing plate	
187	Bearing 6004ZZ	216	Fan blade	
188	Gear box cover	217	Big washer 5 (φ5Xφ15X2)	
189	Hexagon socket button head screws M5X16	218	Spring washer 5	
190	Flat key 5X5X10	219	Hexagon socket button head screws M5X12	
191	Spindle of Saw blades	220	Gust	
192	Saw blades (255X30X1.8X2.6)	221	Bracket of Gust	
193	Saw blades Clamp	222	Hexagon socket button head screws M6X12	
194	Saw blades Nut	223	Flat washer 6 (φ6Χφ12Χ1.6)	
195	Hexagon socket button head screws M6X16	224	30 soft pipe(1.4m)	
196	Nut M6	225	30 Ring (25-38mm)	
197	Flat washer 6 (φ6Χφ12Χ1.6)	226	Bolt M5X8	
198	hexagon socket set screws with flat point M6X10	226	Cross recessed pan head screw M5X8	
199	Bracing plate	227	Adaptor	
200	Cutting board	227	Connect bend	
201	Cutting board clamp	227	Cross recessed pan head tapping screw ST3.5X9.5	
202	Fixed wrench spring1	228	50 Ring (44-64mm)	
203	Cutting board fixed wrench	229	50 Soft pipe(0.4m)	
203	Wrench inserts	230	50 Soft pipe(0.22m)	
204	Cutting board fixed spindle	231	Cross recessed pan head screw M4X6	
205	Fixed wrench spring2	232	Adaptor	
206	Cutting board fixed wrench cover	233	Cross recessed pan head tapping screw ST3.5X9.5	
207	Hexagon socket button head screws M5X8	234	Cross recessed pan head tapping screw ST3.5X16	
208	Junction plate	235	Big washer 4 (φ4Xφ12X1)	



T 4/	H		
236	Right cover	267	Point of guide plate
237	Big washer 5 (φ5Χφ15X1.2)	268	Cross recessed pan head screw M4X8
238	Cross recessed pan head screw M5X12	269	Hexagon socket button head screws M6X12
239	Hand slap	270	Guide plate
240	Fixed cover of Draw bar	271	Cross recessed pan head tapping screw ST4.2X9.5
241	Guide block of Draw bar	272	Back seat of guide plate
242	Hexnut M5	273	Round pin Ф4x30
243		274	Spring of guide plate
244	Locating pin of Draw bar	275	Draw plate of guide plate
245	Fixed Slide block	276	Nut M6
246	Slide bar	277	
247	Big washer 5 (φ5Χφ15Χ1.2)	278	
248	Hexagon socket button head screws M5X8	279	Extent working table
249	Handle seat	280	Hexagon socket button head screws M6X16
250	Spring of Draw bar	281	Nut
251	Mandril	282	Cross recessed pan head tapping screw ST3.5X9.5
252	Cross recessed pan head screw M4X12	283	Сар
253	Nut M4	284	Frant rail
254	Handle of draw bar switch	285	Cross recessed pan head tapping screw ST3.5X13
255	Push plate	286	Stop block
256	Round pin Φ5x20	287	Cross recessed pan head tapping screw ST3.5X9.5
257	Handle cover	288	Point of front rail
258	Cross recessed pan head tapping screw ST4.2X16	289	Ruler of front rail
259	Interling	290	Fixed Block
260	Fixed handle of guide plate	291	Bolt M6X80
261	Spingle of draw	292	Connect block
262	Cross recessed pan head M4X10	293	Nut M6
263	Supporting of Front seat	294	Short draw of extend working table
264	Front seat of guide plate	295	Wrench seat
265	Flat washer φ16Χφ30Χ1.5	296	Nut M6
266	Fixed draw of guide plate	297	Hexagon socket button head screws M6X12



298	Hexagon socket button head screws M6X40	322	Hexagon socket button head screws M5X12
299	Fixed wrench	323	Stand
300	Long draw	324	Connect
301	Cross recessed pan head screw M5X8	325	Hexagon socket button head screws M6X12
302	Clamp	326	Bolt M6X20
303	Nut M6	327	Flat washer 6 (φ6Χφ12Χ1.6)
304	Back rail	328	Hexnut M6
305	Cap	329	Ring 12
306	Wire-steel	330	Spindle of wheel
307	Hexagon socket button head screws M6X16	331	Caster (φ102Xφ12.7X40)
308	Slide seat	332	Bracing plate
309	Hexnut M4	333	Hexnut M6
310	Bolt M6X12	334	circular arc spacer 1
311	Draw of back bracket	335	Hexagon socket button head screws M6X40
312	Ring -pull 1	336	Up Cover of Foot margin
313	Bag	337	Foot margin 1
314	Cross recessed pan head screw M4X12	338	Foot pad
315	Ring- pull 2	339	Big washer 4 (φ4Χφ12X1)
316	Hexnut M4	340	Cross recessed pan head tapping screw ST3.5X38
317		341	Adjust bar of foot margin
318	Cross recessed pan head screw M5X8	342	Nut M8
319	Slide bar of back bracket	343	Wrench 4mm
320	Back bracket	344	Wrench 5mm
321	Big washer 5 $(\phi 5X\phi 15X1.2)$		



## 16.1 Ersatzteilbestellung

Mit Originalteilen von Holzmann und seinen Herstellern verwenden Sie Ersatzteile, die ideal aufeinander abgestimmt sind. Die optimale Passgenauigkeit der Teile verkürzen die Einbauzeiten und erhalten die Lebensdauer. Für Ersatzteilanfragen wenden Sie sich bitte an Ihren Fachhändler.

## **HINWEIS**

**Der Einbau von anderen als Originalersatzteilen führt zum Verlust der Garantie!**Daher gilt:

Beim Tausch von Komponenten/Teilen nur Originalersatzteile verwenden

Bestelladresse sehen Sie unter Kundendienstadressen im Vorwort dieser Dokumentation.

## 16.2 Spare part order

With original Holzmann spare parts you use parts that are attuned to each other and shorten the installation time and elongate your machines lifespan.

#### **IMPORTANT**

The installation of non-original parts renders warranty null and void.

So you always have to use original spare parts.

You find the order address in the preface of this operation manual.



## 17 KONFORMITÄTSERKLÄRUNG/CERTIFICATE OF CONFORMI-TY



## EG - KONFORMITÄTSERKLÄRUNG

HOLZMANN MASCHINEN® GmbH Marktplatz 4, A-4170 Haslach

Tel.: +43/7289/71562-0; Fax.: +43/7289/71562-4

www.holzmann-maschinen.at

#### Bezeichnung/name

#### Mobile Tischkreissäge / mobile circular saw

#### Type/model

#### Holzmann TS 255 M

#### EG-Richtlinien/EC-directives

Annex I of Council Directive 2006/95/EC Annex I of Council Directive 2006/42/EC

#### Berichtsnummern/test report numbers

15039945 001

#### Registrierungsnummern/registration numbers

AN 50189979 0001 BM 50189977 0001

#### Ausstellungsbehörde/issuing authority

• TÜV Rheinland LGA Products GmbH

Tillystraße 2 90431 Nürnberg Germany

#### Ausstellungsdatum/issuing date

17.03.2011

Hiermit erklären wir, dass die oben genannte Maschine den aufgrund ihrer Bauart und Konzipierung sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen, grundlegenden Sicherheits- und Gesundheitsanforderungen der oben EG-Richtlinien entspricht. Diese Erklärung verliert ihre Gültigkeit, wenn Veränderungen an der Maschine vorgenommen werden, die nicht ausdrücklich schriftlich mit uns im Vorfeld abgestimmt wurden.

Hereby we declare, that the above mentioned machine is in conformity with all applicable essential safety and health requirements set out in the above stated EC-Directives. Any manipulation or modification of the machines not authorized by us renders this document invalid.

Haslach, 06.12.2011

Ort / Datum

MANN HOLZMANN MASCHINEN GmbH

Marktplatz 4, 4170 Haslach

Weiteref Standort:
Gewerbeparkt 8, 4707 Schlüsslberg

www.holzmann-maschinen.at

Klaus Schörgenhuber

 $\mbox{HOLZMANN Maschinen Austria} \ \ \xi \ \ \mbox{www.holzmann-maschinen.at}$ 

Seite 46



## **18 GARANTIEERKLÄRUNG**

#### (Stand 30.12.2011)

Mängelhaftungsansprüche des Käufers aus dem Kaufvertrag gegenüber dem Verkäufer (Holzmann Vertriebspartner) sowie gesetzliche Gewährleistungsrechte des jeweiligen Landes, werden durch diese Garantieerklärung nicht berührt.

#### Für diese Maschine leisten wir Garantie gemäß folgenden Bedingungen:

- A) Die Garantie umfasst die unentgeltliche Beseitigung aller Mängel an der Maschine, nach Maßgabe der nachfolgenden Regelungen (B-E), welche die ordnungsgemäße Funktion der Maschine beeinträchtigen und nachweislich auf Material- oder Herstellungsfehler beruhen.
- B) Die Garantiezeit beträgt 12 Monate, bzw. 6 Monate bei gewerblicher Nutzung, gültig ab Lieferung der Maschine an den Erstendabnehmer. Als Nachweis ist der Original-Ablieferbeleg maßgeblich, bei Selbstabholung der Maschine der Original Kaufbeleg.
- C) Zur Anmeldung von Garantieansprüchen kontaktieren Sie bitte den HOLZMANN Vertriebspartner, von dem Sie die Maschine erworben haben, mit folgenden Unterlagen:
  - >> Kaufbeleg und/oder Ablieferbeleg
  - >> Fehlerbericht
  - >> Bei Anforderung von Ersatzteilen unter Garantie füllen Sie bitte umseitiges Formular "Ersatzteilanforderung" sowie eine Kopie der Ersatzteilzeichnung -mit den benötigten Ersatzteilen markiert - bei.
- D) Die Garantieabwicklung und der Ort der Garantieerfüllung erfolgt nach Maßgabe der HOLZMANN GmbH. Leicht zu behebende Mängel werden durch unsere Vertriebspartner beseitigt, bei komplexeren Defekten behalten wir uns eine Begutachtung in 4707 Haslach, Österreich vor.
  - Sofern nicht explizit ein zusätzlicher Vor-Ort Servicevertrag abgeschlossen ist, gilt als Erfüllungsort der Garantieleistung stets der HOLZMAN-MASCHINEN Firmensitz in 4707 Haslach, Österreich. Die im Rahmen einer Garantiebearbeitung anfallenden Transportkosten von und zum Vertriebspartner sowie von und nach Haslach sind in dieser Hersteller-Garantie nicht abgedeckt.
- E) Garantieausschluss bei Mängeln:
  - an Maschinenteilen, welche gebrauchsbedingten oder sonstigen natürlichen Verschleiß unterliegen, sowie Mängeln an der Maschine, die auf einen gebrauchsbedingten oder sonstigen natürlichen Verschleiß zurückzuführen sind.
  - die auf unsachgemäße oder fahrlässige Montage, Inbetriebnahme, bzw. Anschluss an das elektrische Netz zurückzuführen sind.
  - die auf Nichtbeachtung von Bedienungshinweisen, nicht bestimmungsgemäßen Gebrauch, atypischen Umweltbedingungen, sachfremden Betriebsbedingungen und Einsatzgebiet, mangelnde bzw. unsachgemäße Wartung oder Pflege zurückzuführen sind.
  - die durch die Verwendung sowie Einbau von Zubehör-, Ergänzungs- oder Ersatzteilen verursacht wurden, die keine Original HOLZMANN Ersatzteile sind.
  - die geringfügige Abweichungen vom Soll-Zustand darstellen, welche für den Wert oder die Gebrauchstauglichkeit der Maschine unerheblich sind.
  - die auf fahrlässige konstruktionsbedingte Überbeanspruchung zurückzuführen sind. Insbesondere bei Mängeln durch Nutzung, welche durch Belastungsniveau und Umfang als gewerblich einzustufen sind, bei Maschinen, die nach Bauart und Leistungsvermögen nicht für den gewerblichen Gebrauch konstruiert und bestimmt sind.
- F) Im Rahmen dieser Garantie sind weitere Ansprüche des Käufers über die hier ausdrücklich genannten Garantieleistungen hinaus ausgeschlossen.
- G) Diese Hersteller-Garantie wird freiwillig übernommen. Garantieleistungen bewirken daher keine Verlängerung der Garantiefrist und setzen auch keine neue Frist, auch nicht für Ersatzteile, in Gang.

#### **SERVICE**

Nach Ablauf der Garantiezeit können Instandsetzungs- und Reparaturarbeiten von entsprechend geeigneten Fachfirmen durchgeführt werden. Es steht Ihnen auch die HOLZMANN-Maschinen GmbH weiterhin gerne mit Service und Reparatur zur Seite. Stellen Sie in diesem Fall eine unverbindliche Kostenanfrage, unter Angabe der Informationen siehe C) an unseren Kundendienst oder senden Sie uns Ihre Anfrage einfach per umseitig beiliegendem Formular ein.

Mail: service@holzmann-maschinen.at

FAX: +43 (0) 7248 61116 6

 $\mbox{HOLZMANN Maschinen Austria} \ \ \xi \ \ \mbox{www.holzmann-maschinen.at}$ 



#### **19 GUARANTEE TERMS**

#### (applicable from 30.12.2011)

Please consult our troubleshooting section for initial problem solving. Feel free to contact your HOLZMANN reseller or us for Customer Support!

Warranty claims based on your sales contract with your HOLZMANN retailer, including your statutory rights, shall not be affected by this guarantee declaration. HOLZMANN-MASCHINEN grants guarantee according to following conditions:

- A) The guarantee covers the correction of deficiencies to the tool/machine, at no charge, if it can be verified adequately that the deficiencies were caused by a material or manufacturing fault.
- B) The guarantee period lasts 12 months, and is reduced to 6 months for tools in commercial use. The guarantee period begins from the time the new tool is purchased from the first end user. The starting date is the date on the original delivery receipt, or the sales receipt in the case of pickup by the customer.
- C) Please lodge your guarantee claims to your HOLZMANN reseller you acquired the claimed tool from with following information:
  - >> Original Sales receipt and/or delivery receipt
  - >> Service form (see next page) filed, with a sufficient deficiency report
  - >> for spare part claims: a copy of the respective exploded drawing with the required spare parts being marked clear and unmistakable.
- D) The Guarantee handling procedure and place of fulfillment is determined according to HOLZMANNs sole discretion in accordance with the HOLZMANN retail partner. If there is no additional Service contract made including on-site service, the place of fulfillment is principally the HOLZMANN Service Center in Haslach, Austria.
- E) Transport charges for sendings to and from our Service Center are not covered in this guarantee. The Guarantee does not cover:
  - Wear and tear parts like belts, provided tools etc., except to initial damage which has to be claimed immediately after receipt and initial check of the machine.
  - Defects in the tool caused by non-compliance with the operating instructions, improper assembly, insufficient power supply, improper use, abnormal environmental conditions, inappropriate operating conditions, overload or insufficient servicing or maintenance.
  - Damages being the causal effect of performed manipulations, changes, additions made to the machine.
  - Defects caused by using accessories, components or spare parts other than original HOLZMANN spare parts.
  - Slight deviations from the specified quality or slight appearance changes that do not affect functionality or value of the tool.
  - Defects resulting from a commercial use of tools that based on their construction and power output - are not designed and built to be used within the frame of industrial/commercial continuous load.
- F) Claims other than the right to correction of faults in the tool named in these guarantee conditions are not covered by our guarantee.
- G) This guarantee is voluntary. Therefore Services provided under guarantee do not lengthen or renew the guarantee period for the tool or the replaced part.

### **SERVICE**

After Guarantee and warranty expiration specialist repair shops can perform maintenance and repair jobs. But we are still at your service as well with spare parts and/or machine service. Place your spare part / repair service cost inquiry by filing the SERVICE form on the following page and send it:

via Mail to service@holzmann-maschinen.at

or via Fax to: +437248611166



# SERVICE FORM / SERVICEFORMULAR

Please tick one	box from belo	w / Bitte kreuze	en Sie eine der unten	stehenden an:
service in spare par guarantee	quiry t inquiry e claim	/ Servicea / Ersatztei / Garantie	lanfrage	
1. Senders inf	ormation (*	required) / D	aten Antragsteller	(* sind Pflichtfelder)
*First name, Fa	mily name / V	orname, Nachn	ame	
*Street, house	number / Stra	ße, Hausnumm	er	
*ZIP Code, plac	e / PLZ, Ort			
*Country / Staa	at			
*(mobile)Phone International numb  * E-Mail	•			
Fax				
2. Tool info	rmation / Ge	eräteinformati	ionen	
serial number/S	Seriennummer	:*M	achine type/Maschine	entype:
2.1 Required	l spare parts	/ benötigte E	rsatzteile	
Part Noº / Ersa	tzteilnummer	Description /	Beschreibung	Number/Anzahl
2.2 Problem  Please describe amongst others in What has caused the problem/def blem/defect? For electric problems: Have you! by a certified electrician?	the problem: fect, what was the last activity		Bitte führen Sie in der Fehlerbeschreibu Was hat den Defekt verursacht bzw. wa nen das Problem/der Defekt aufgefallen	s war die letzte durchgeführte Tätigkeit, bevor Ih-
3. Addition  INCOMPLETELY FILED SERV FOR GUARANTEE CLAIMS P DELIVERY RECEIPT OTHERW FOR SPARE PART ORDERS P.	LEASE ADD A COPY OF Y	ROCESSED! OUR ORIGINAL SALES / PTED.	WERDEN!	FORMULARE KÖNNEN NICHT BEARBEITET USSCHLIESSLICH UNTER BEILAGE DES

 $\hbox{HOLZMANN Maschinen Austria} \ \ \xi \ \ www.holzmann-maschinen.at$ 

FOR SPARE PART ORDERS PLEASE ADD TO THIS SERVICE FORM A COPY OF THE RESPECTIVE EXPLODED DRAWING WITH THE REQUIRED SPARE PARTS BEING MARKED CLEARLY AND UNMISTAKABLE.

THIS HELPS US TO IDENTIFY THE REQUIRED SPARE PARTS FASTLY AND ACCELERATES THE HANDLING OF YOUR INQUIRY.

Seite 49

THANK YOU FOR YOUR COOPERATION!

BEI ERSATZTEILBESTELLUNGEN LEGEN SIE DIESEM FORMULAR EINE KOPIE DER BETREFFENDEN ERSATZTEILZEICHNUNG BEI! MARKIEREN SIE DARAUF

DIE BENÖTIGTEN ERSATZTEILE. DIES ERLEICHTERT UNS DIE IDENTIFIZIE-

RUNG UND ERMÖGLICHT SO EINE RASCHERE BEARBEITUNG.

VIELEN DANK!



## **Produktbeobachtung**

Wir beobachten unsere Produkte auch nach der Auslieferung.

Um einen ständigen Verbesserungsprozess gewährleisten zu können, sind wir von Ihnen und Ihren Eindrücken beim Umgang mit unseren Produkten abhängig:

- Probleme, die beim Gebrauch des Produktes auftreten
- Fehlfunktionen, die in bestimmten Betriebssituationen auftreten
- Erfahrungen, die für andere Benutzer wichtig sein können

Wir bitten Sie, derartige Beobachtungen zu notieren und an diese per E-Mail, Fax oder Post an uns zu senden:

Meine Beobachtungen/ My experiences:

## **Product experience form**

We observe the quality of our delivered products in the frame of a Quality Management policy.

Your opinion is essential for further product development and product choice. Please let us know about your:

- $\boldsymbol{\lambda}$  Impressions and suggestions for improvement.
- $\lambda$  experiences that may be useful for other users and for product design
- $\lambda$  Experiences with malfunctions that occur in specific operation modes

We would like to ask you to note down your experiences and observations and send them to us via FAX, E-Mail or by post:

Name:			
Product:			
Purchase date:			
Purchased from:			
My Email:			
Thank you for your kind	cooperation!		

# KONTAKTADRESSE / CONTACTS: HOLZMANN MASCHINEN GmbH

4170 Haslach, Marktplatz 4 AUSTRIA Fax 0043 7248 61116-6 service@holzmann-maschinen.at